13430 1997-2006 JEEP WRANGLER INCL. UNLIMITED AND TJ

8/19/2009


GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 4,000 LBS. TRAILER WEIGHT & 400 LBS. TONGUE WEIGHT.

DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY AUXILIARY STABILIZING STRAPS.

** FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY**

HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813

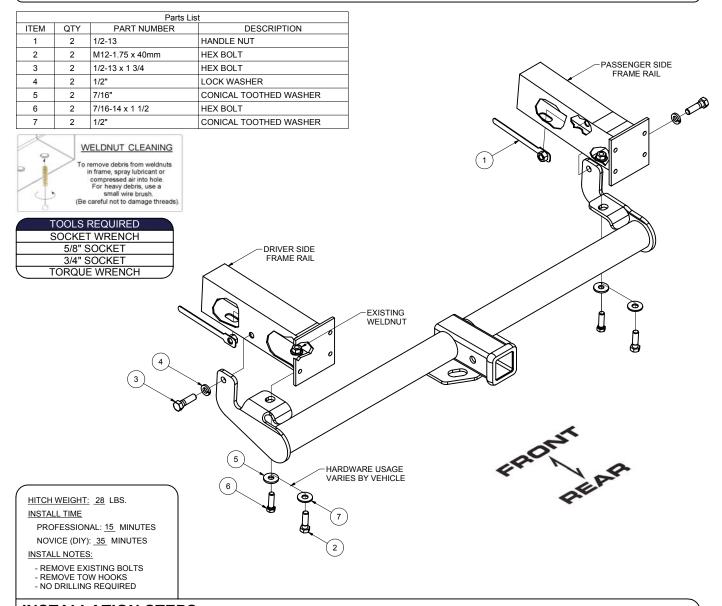

INSTALLATION STEPS

- 1. Remove existing bolt from bumper attachment on driver and passenger side.
- 2. Remove tow hooks if equipped. Return hooks and hardware to vehicle owner.
- 3. Raise hitch into position and secure with hardware as shown. Hardware attaching to weldnut from Step 1 will vary by vehicle. Use either 7/16" bolt and 7/16" conical toothed washer, or M12 bolt and 1/2" conical toothed washer. Note: Clean weldnuts as shown in diagram prior to install.
- 4. Torque 1/2" hardware to 75 lb-ft, 7/16" hardware to 50 lb-ft, and M12 hardware to 68 lb-ft.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.